



1 外觀

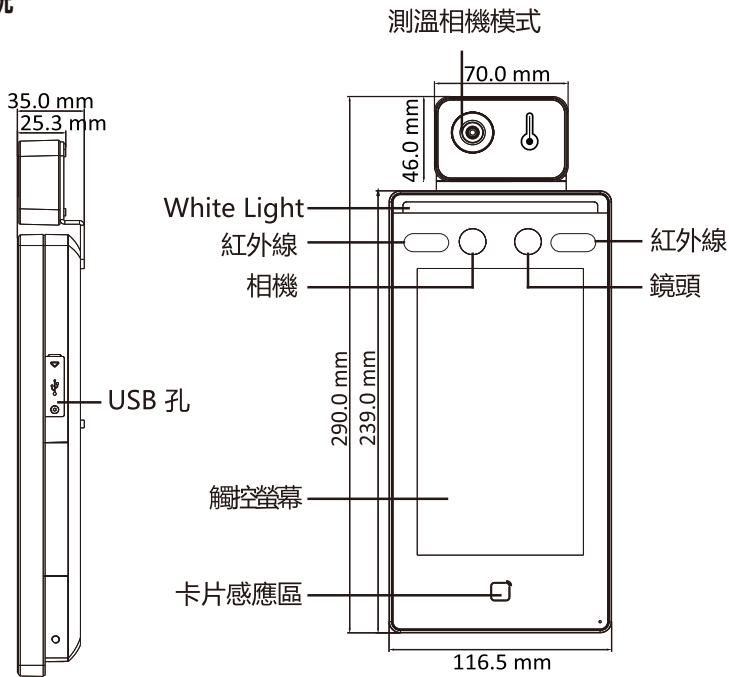

2 安裝

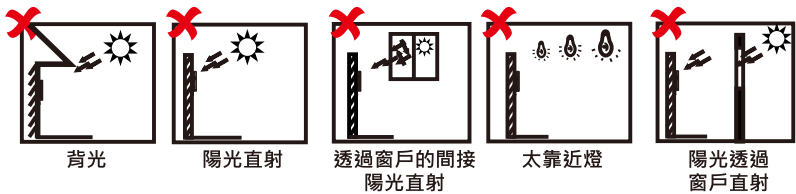

安裝環境


- 避免背光、陽光直射及陽光間接直射
- 為了最佳辨識品質，安裝環境中或附近應有光源(燈)
- 陽光、風、雨、太熱及太冷和其他可能影響表面溫度的外部因素都會造成溫度測量的偏差。為了獲得準確的結果，請確保設備在室內無風(與室外相對隔離的地方)安裝。安裝環境溫度應保持在 10 °C 至 35 °C 之間。如果沒有合適的溫度測量環境(該區域面向室內並連接室外、室內環境門口區域等)，建議搭建臨時測溫環境。
- 影響測量溫度因素
 - 風：風會將熱量帶走，可能會影響測量結果。
 - 汗水：汗水會將熱量帶走，可能會影響測量結果。
 - 冷氣(空調)：如果室內溫度低，表面溫度也可能低於實際溫度，可能會影響測量結果。
 - 暖氣(空調)：如果室內溫度高，表面溫度也可能高於實際溫度，這可能會影響測量結果。
- 為使設備可常正使用，請在開機後等待90分鐘才進行使用

步驟



確保電源瓦數符合標準

1. 在牆上或其他表面鑽洞安裝線路盒，以連結測溫相機模組
2. 使用5個隨附螺絲(4_KA4x22-SUS)將背板安裝在線路盒上
3. 把設備與背板對齊，將設備掛在背板上，並確保背板兩側的薄板已插入設備背面的孔中。
 - * 當螺絲釘頭置於設備下方，代表設備被固定
 - * 安裝高度為建議高度，可依實際使用需求調整高度
 - * 也可將設備直接安裝在牆面或其他表面，而不使用線路盒
 - * 為了方便安裝，請依據背板上的孔在牆上或其他安裝表面上鑽孔
4. 使用2個隨附的螺絲(SC-M4x12TP10-SUS)固定設備及背板。

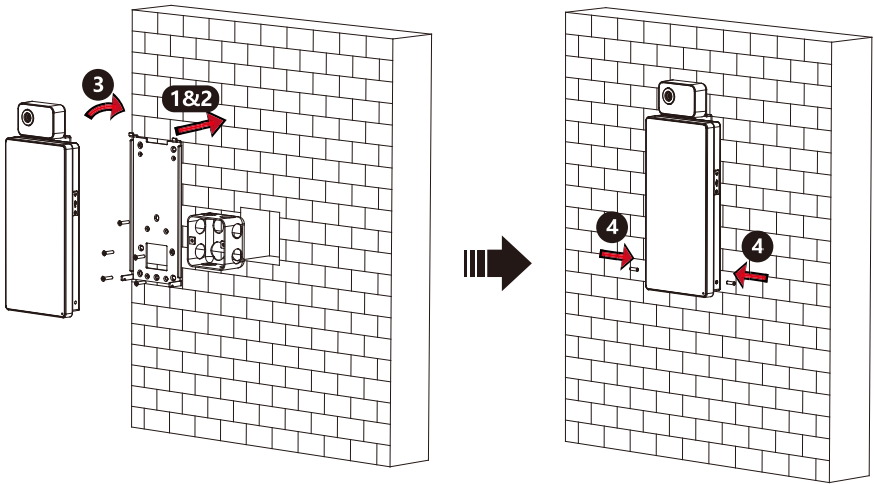

3 啟動

● 啟動設備

開機後，將會進入啓用畫面

步驟：

1. 首次開機請建立管理者(Admin)密碼及再次輸入管理者(Admin)密碼
2. 點選 【Enter】啓用設備



我們強烈建議你的建立一個強度的密碼(至少使用8碼，包含大小寫英文字母、數字和特殊符號)，同時建議您每個月或每週定期更換密碼，以提高產品的安全性。

● 設備快速操作

開機後可選擇語言、更改密碼類型、設定應用模式、設定網路、設定隱私及設定管理員

4 測溫相機模式設定

1. 按住螢幕並驗證身份登入畫面
2. 按【溫度】進入溫度設定畫面設定

● 啓用溫度檢測功能

開始該功能時，設備會進行身份驗證，同時測量溫度。

禁用此功能時，設備將僅有身份驗證權限。

● 過度過高警報門檻

根據實際情況編輯溫度，如果檢測到的溫度高於預設值，則會觸發警報，預計值為37.3度。

● 溫度調整

如果測量的溫度 高於/低於 實際測量溫度，您可以調整溫度，調整範圍：-99 °C 至 99 °C。

● 檢測到異常溫度時，門將無法打開

此功能開啓時，當檢測溫度高於設定溫度時，門將不會打開。此功能預設為啓用狀態

● 溫度測量

開啓該功能時，設備不會進度身份驗證，只測溫度，當禁用此功能時，設備將會同時進度身份驗證及溫度測量

● 單位

根據喜好選擇溫度單位

● 測量區域校正及測量區域設定

設定測溫區域及校正值

● 黑名單設定

開啓該功能時，您可以設定人臉及卡號為黑名單。

5 增加人臉辨識照片

1. 用手指遮住螢幕三秒後且左右滑動，輸入管理者(Admin)密碼進入管理頁面
2. 選擇管理者頁面，選擇+進入增加使用者頁面
3. 不翻譯製作
4. 擇人臉依指示增加使用者訊息，也可以在螢幕上確認抓到的人臉畫質及尺寸。確認辨識別者的相關資訊是否正確無誤。
5. 若照片畫質或品質不佳，請選擇 或 重新拍攝照片
6. 選擇 儲存圖示存檔，回到首頁，即可開始驗證身份



人臉辨識產品並非100%適用於反欺騙環境，如果您需要更高的安全級別，請使用多種身份驗證模式。


收集或辨識人臉及照片提醒

臉部表情

- 在辨識比對或照片收集時，臉部表情請勿誇張表情，以自然呈現為佳
- 請勿戴帽子、太陽眼鏡或其他遮住臉部之物品
- 注意瀏海請勿遮著眼、耳，臉部請勿上濃妝


姿勢

為收集或比對高品質的人臉，請正面朝向設備

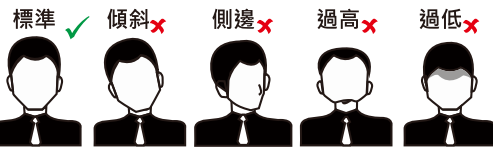


尺寸

確保您的臉在螢幕中間

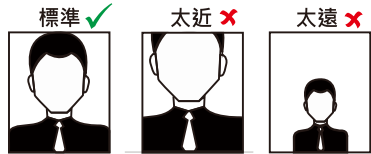

收集/比對人臉時建議位置

最佳辨識高度1.45m至 1.9 m

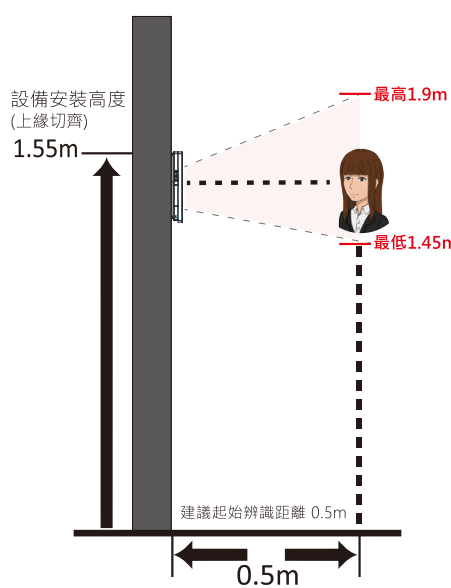

One Year Limited Warranty / 产品保固证明书 / 產品保固證明書

We warrants this product against defect in material or workmanship for 1 year from the date of purchase. If such a defect is discovered within this warranty limitation, contact your direct vendor for repair or replacement of your unit.

When returning the product, you must ship the product in its original packaging or packaging that gives an equal degree of protection. This warranty becomes invalid if the factory-supplied serial number has been removed or altered on the product.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than We.

In no event shall We liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential, damages resulting from the use of the product the product, its accompanying software, or it's documentation. We makes no warranty or representation expressed, implied, or statutory, with respect to its products, contents of use of this documentation and all accompanying software, and specially disclaims its quality, performance, merchantability or fitness for any particular purpose. We reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity.

我們保固此產品於購買日起一年之內因為材料上或是生產製造中所產生的缺陷，所造成的外觀上，或是功能上的缺陷及故障問題。若您是在此保固期限之內發現此類問題，請聯絡本公司的服務人員，退回此產品，我們將替您免費維修或是更換產品。

當您退回此產品時，請依照原始的包裝方式包裝此產品，或是給予同等級的包裝保護；若是我們收到此產品時，產品上沒有出廠時的序號標籤，或是產品已經拆開或與出廠時有任何不同，這個保固將變得無效。

此保固不包含天然的，以及人為的破壞或改變，或是意外事故、不正當操作、誤用、濫用等外在因素所造成的損壞。

此保固不包含不當的操作或保養，不當的連結至其他設備，或是由本公司以外的人員企圖修復此產品。

起因於使用這種產品，在間接、特別、次要因素，或者隨之發生，造成伴隨著軟件或其它文檔的損害，本公司的責任在任何情況下都不得超過這產品的售價。

關於產品的軟件和文檔編制的全部內容，本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。

本公司保留權利修正或者不斷改進它的產品，軟件或者文檔編制無義務通知任何個人或者購買者。


Model / 型号 / 型號	Serial no. / 序号 / 序號	Date of Purchase / 购买日期 / 購買日期	Reseller stamp / 经销商 / 經銷商

Warranty will be valid only after filling out this form and stamped or signed by reseller!

此保固书必须填写妥各项内容，并且盖有经销商印鉴始为有效。

此保固書必須填妥各項內容，並且蓋有經銷商印鑑始為有效。


1 Appearance

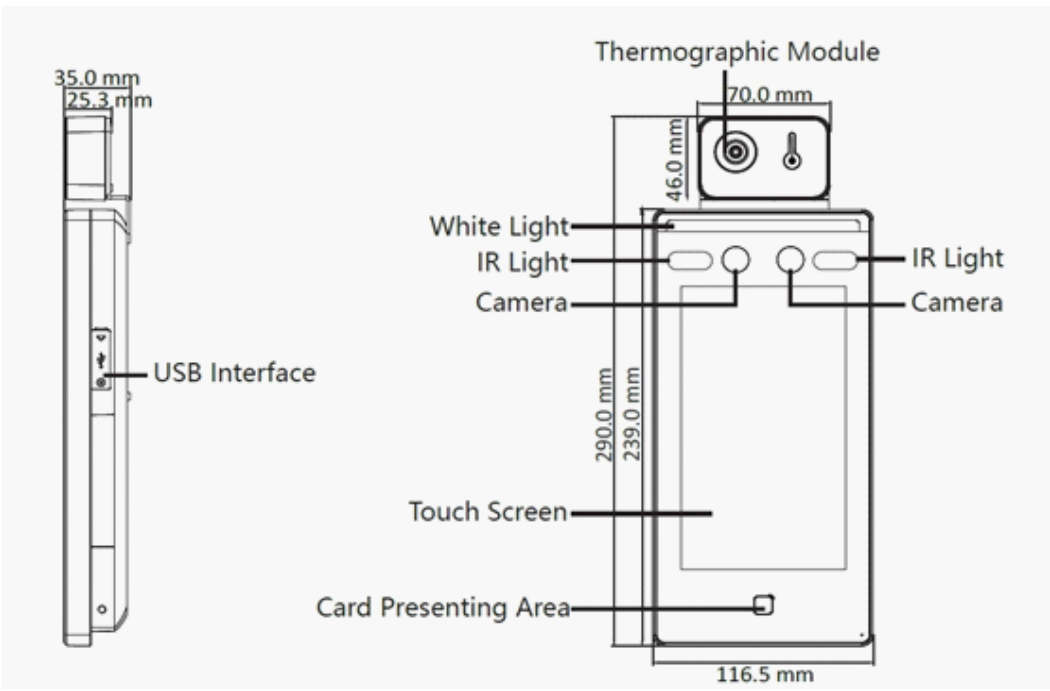

2 Installation

Installation Environment:

- Avoid backlight, direct sunlight, and indirect sunlight.
- For better recognition, there should be light source in or near the installation environment.

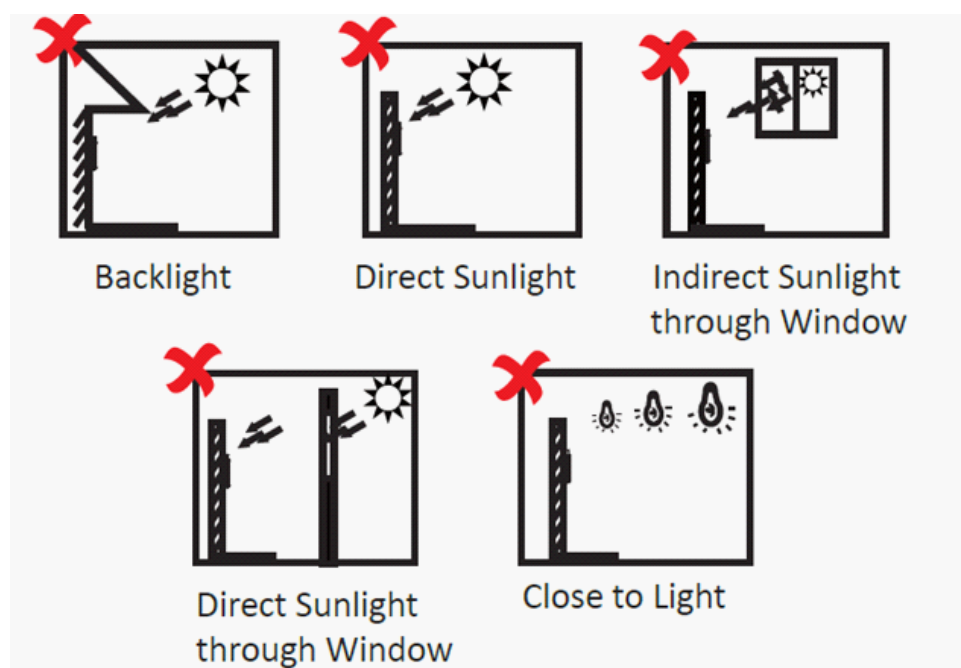


Temperature Measurement Environment:

- sunlight, wind, hot/cool air from air conditioner and other external factors, which may affect surface temperature, will create the deviation of the temperature measurement. In order to get an accurate result, make sure the device is applied indoors and windlessly (where is relatively isolated from the outdoors). The
- working temperature should keep between 10 °C and 35 °C. If there are no suitable environments for temperature measurement (the area faces the indoor and connects the outdoor, the area at the door of the indoor environment, etc.), building a temporary temperature measurement environment is suggested.
- Influence Factors of Temperature Measurement:
 - Wind: The wind will take the heat away, which may affect the measurement result.
 - Sweat: The sweat will take the heat away, which may affect the measurement result.
 - Air Conditioner (Cool Air): If the indoor temperature is low, the surface temperature may also lower than the actual temperature, which may affect the measurement result.
 - Air Conditioner (Heat) or Heating: If the indoor temperature is high, the surface temperature may also higher than the actual temperature, which may affect the measurement result.
- In order to make the device work properly, you should wait for 90 min after the device is powered on.

Step:

- ⚠ Make sure the output of external power supply fulfils LPS.

1. Drill holes on the wall or other surface and install the gang box. Connect the thermographic module and the main body of the device.
2. Use 5 supplied screws (4_KA4×22-SUS) to secure the mounting plate on the gang box.
3. Align the device with the mounting plate and hang the device on the mounting plate.
4. Make sure the two sheets on each side of the mounting plate have been in the slots at the back of the device.
5. Use 2 supplied screws (SC-M4×14.5TP10-SUS) to secure the device and the mounting plate.

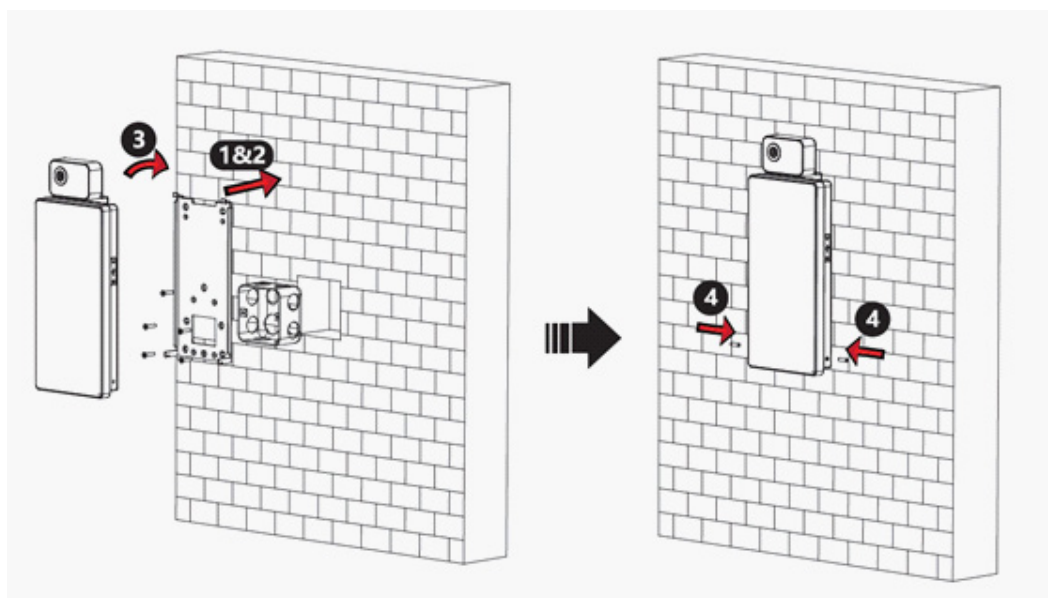

3 Activation

- Activation via Device After powering on, you will enter the activation page.

Steps:

1. Create a password and confirm the password.
2. Tap **Activate** to activate the device.

⚠ STRONG PASSWORD RECOMMENDED-

We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product.

And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Device Quick Operation

After activating, you can select language, set password change type, set reserved questions, set application mode, set network parameters, access to Guarding Vision, set privacy, and set administrator.

4 Temperature Measurement Setting

1. Hold the screen surface and verify the identity to enter the main page.
2. Tap "Temperature" to enter the Temperature Settings page. Configure the parameters.

Enable Temperature Detection:

When enabling the function, the device will authenticate the permissions and at the same time take the temperature. When disabling the device, the device will authenticate the permissions only.

Over-Temperature Alarm Threshold:

Edit the threshold according to actual situation. If the detected temperature is higher than the configured one, an alarm will be triggered. By default, the value is 37.3°.

Temperature Compensation:

If the measured temperature is higher/lower than the actual object's temperature, you can set the compensation temperature here. Available range: -99 °C to 99 °C.

Door Not Open When Detecting Abnormal Temperature:

When enabling the function, the door will not open when the detected temperature is higher than the configured temperature threshold. By default, the temperature is enabled.

Temperature Measurement Only:

When enabling the function, the device will not authenticate the permissions, but only take the temperature. When disabling the function, the device will authenticate the permissions and at the same time take the temperature.

Unit: Select a temperature unit according to your preference.

Measurement Area Calibration/Measurement Area Settings:

Configure the temperature measurement area and the correction parameters.

Black Body Settings:

When enabling the function, you can configure the black body's parameters, including the distance, and emissivity.

5 Adding Face Information :

- Hold the screen surface for 3 s and slide to right/left and verify the identity to enter the main page.
 - Enter the User Management page, tap + to enter the Add User page.
 - Tap Face add the face information according to the instructions. You can view the captured picture on the screen. Make sure the face picture is in good quality and size.
- For details about the tips and positions when collecting or comparing the face picture, see the contents on the right.


- ⚠ Biometric recognition products are not 100% applicable to anti-spoofing environments. If you require a higher security level, use multiple authentication modes.

Tips When Collecting/Comparing Face Picture Expression

- Keep your expression naturally when collecting or comparing face pictures.
- Do not wear hat, sunglasses, or other accessories that can affect the facial recognition function.
- Do not make your hair cover your eyes, ears, etc. and heavy make-up is not allowed.


Posture

In order to get a good quality and accurate face picture, position your face looking at the camera when collecting or comparing face picture.

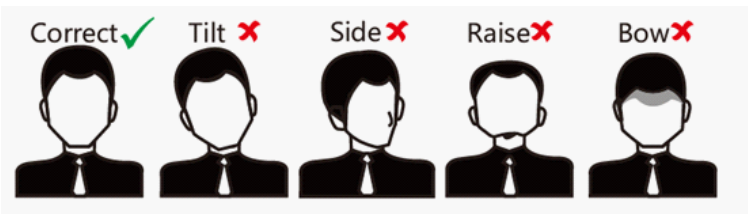

Size

Make sure your face is in the middle of the collecting windows.

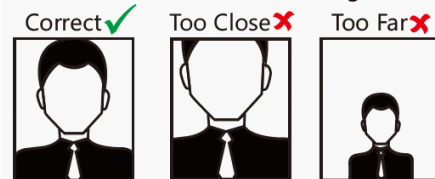

Positions When Collecting/Comparing Face Picture (Recommended Distance: 0.5m)

