

1 Package Contents / 包装内容/ 包裝內容

Kindly ensure the product's contents upon unpacking, and refer to this installation guide for the product's specifications, important notices and installation instructions.
The package contents and quantity may vary slightly according to reader's model; the items described below are the standard packaging.

打开包装确认产品包装内容，并请详细阅读说明文件，认识产品规格特性、注意事项与安装方法。
产品包装内容与数量依产品别而略有不同，实际内容以产品包装物为准。

打開包裝確認產品包裝內容，並請詳細閱讀說明文件，認識產品規格特性、注意事項與安裝方法。
產品包裝內容與數量依產品別而略有不同，實際內容以產品包裝物為準。



Reader x 1
Base x 1
读卡机/底座
讀卡機/底座




Quick Start Guide x 1
快速安装手册
快速安裝手冊




Hex Key Wrench x 1
Cable x 1 , Knob x 1(PXR-50/52)
Round Adhesive Seal x 1(PXR-52)
Screw x 2 (PXR-50), Screw x 3 (PXR-52),
六角扳手/传输线/面板旋钮/螺丝孔贴片/螺丝
六角扳手/傳輸線/面板旋鈕/螺絲孔貼片/螺絲

2 Physical Dimension / 外观尺寸/ 外觀尺寸

•PXR-50

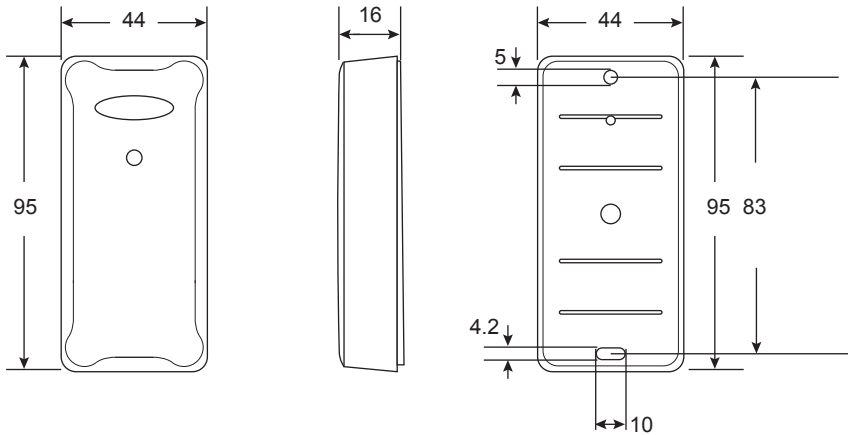


•PXR-52

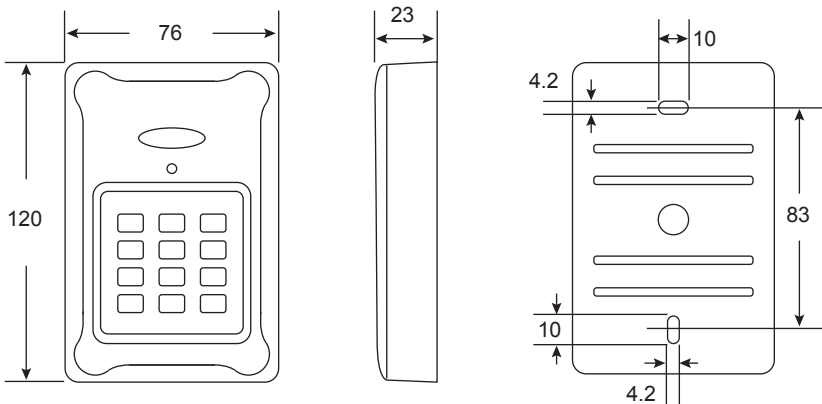

Scale:mm

3 Installation / 安装/ 安裝


• PXR-50 Installation Guide / 安装示意图/ 安裝示意圖

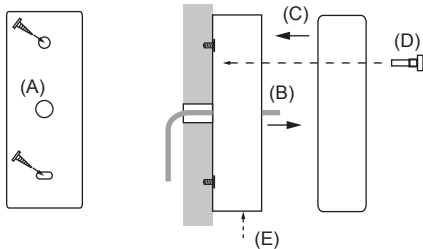

- Kindly refer to the “4 wiring connections” .
- Do not over tighten the back base screws during installation to prevent distortion.
- (A). Mount the back base onto the wall or other desired location.
- (B). Connect the wires in accordance with the wiring instruction below.
- (C). Make sure the back base and the reader upper cover guides are aligned. Install the reader upper cover to the back base.
- (D). Fasten the knob onto the reader to complete the upper cover / back base assembly.
- (E). Using the hex key wrench, fasten the screw onto the bottom of the reader.

- 安装前请先参考 ”4 接线” 。
- 安装读卡机底座时，请勿用力过大以避免造成弯曲变形。
- (A). 将读卡机底座固定在墙上或其他位置。
- (B). 依照接线说明将线接上，并将各接线端子插上。
- (C). 将读卡机往底座方向盖合。
- (D). 使用面板旋钮将读卡机与底座密合锁上。
- (E). 使用六角扳手将螺丝由下方将底部密合锁上。

• PXR-52 Installation Guide / 安装示意图/ 安裝示意圖

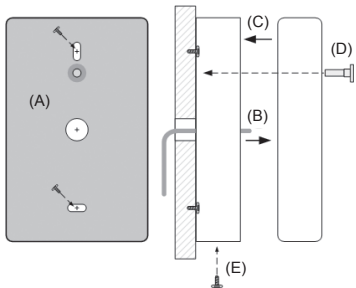

- Kindly refer to the “4 wiring connection” .
- Do not over tighten the back base screws during installation to prevent distortion.
- (A). Mount the back base onto the wall or other desired location.
- (B). Connect the wires in accordance with the wiring instruction below.
- (C). Make sure the back base and the reader upper cover guides are aligned. Install the reader upper cover to the back base.
- (D). Fasten the knob onto the reader to complete the upper cover / back base assembly.
- (E). Using the hex key wrench, fasten the screw onto the bottom of the reader.

- 安装前请先参考 ”4 接线” 。
- 安装读卡机底座时，请勿用力过大以避免造成弯曲变形。
- (A). 将读卡机底座固定在墙上或其他位置。
- (B). 依照接线说明将线接上，并将各接线端子插上。
- (C). 将读卡机往底座方向盖合。
- (D). 使用面板旋钮将读卡机与底座密合锁上。
- (E). 使用六角扳手，将螺丝由下方将底部密合锁上。

HUNDURE
HUNDURE TECHNOLOGY CO., LTD.

T2/WIEGAND PROXIMITY READER

PXR-50 SERIES

PXR-52 SERIES

Quick Start Guide

快速安装手册

快速安裝手冊

Ver. 3.6

PXR-50/52ETWK/MTWK-QMA-20220406
630.0050.0700.36000

www.hundure.com

One Year Limited Warranty / 产品保固证明书 / 產品保固證明書

We warrants this product against defect in material or workmanship for 1 year from the date of purchase. If such a defect is discovered within this warranty limitation, contact your direct vendor for repair or replacement of your unit.
When returning the product, you must ship the product in its original packaging or packaging that gives an equal degree of protection. This warranty becomes invalid if the factory-supplied serial number has been removed or altered on the product.
This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than We. In no event shall We liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential, damages resulting from the use of the product the product, its accompanying software, or it's documentation. We makes no warranty or representation expressed, implied, or statutory, with respect to its products,contents of use of this documentation and all accompanying software, and specially disclaims its quality, performance, merchantability or fitness for any particular purpose. We reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity.

我们保固此产品於购买日起一年之内因为材料上或是生产制造中所产生的缺陷，所造成的外观上，或是功能上的缺陷及故障问题。若您在此保固期限之内发现此类问题，请联络本公司的服务人员，退回此产品，我们将替您免费维修或是更换产品。
当您退回此产品时，请依照原始的包装方式包装此产品，或是给予同等级的包装保护；若是我们收到此产品时，产品上没有出厂时的序号标签，或是产品已经拆开或与出厂时有任何不同，这个保固将变得无效。
此保固不包含天然的，以及人为的破坏或改变、或是意外事故、不正常操作、误用、滥用等外在因素所造成的损坏。
此保固不包含不当的操作或保养，不当的连接至其他设备，或是由本公司以外的人员企图修复此产品。
起因於使用這種產品，在間接、特別、次要因素，或者隨之發生，造成伴隨著軟件或其它文檔的損害，本公司的責任在任何情況下都不得超過這產品的售價。
關於產品的軟件和文檔編制的全部内容，本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。
本公司保留權利修正或者不斷改進它的產品，軟件或者文檔編制無義務通知任何個人或者購買者。

我們保固此產品於購買日起一年之內因為材料上或是生產製造中所產生的缺陷，所造成的外觀上，或是功能上的缺陷及故障問題。若您在此保固期限之內發現此類問題，請聯絡本公司的服務人員，退回此產品，我們將替您免費維修或是更換產品。
當您退回此產品時，請依照原始的包裝方式包裝此產品，或是給予同等級的包裝保護；若是我們收到此產品時，產品上沒有出廠時的序號標籤，或是產品已經拆開或與出廠時有任何不同，這個保固將變得無效。
此保固不包含天然的，以及人為的破壞或改變、或是意外事故、不正常操作、誤用、濫用等外在因素所造成的損壞。
此保固不包含不當的操作或保養，不當的連結至其他設備，或是由本公司以外的人員企圖修復此產品。
起因於使用這種產品，在間接、特別、次要因素，或者隨之發生，造成伴隨著軟件或其它文檔的損害，本公司的責任在任何情況下都不得超過這產品的售價。
關於產品的軟件和文檔編制的全部内容，本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。
本公司保留權利修正或者不斷改進它的產品，軟件或者文檔編製無義務通知任何個人或者購買者。

Model / 型号 / 型號	Serial no. / 序号 / 序號	Date of Purchase / 购买日期 / 購買日期	Reseller stamp / 经销商 / 經銷商

Warranty will be valid only after filling out this form and stamped or signed by reseller!
此保固书必须填写妥各项内容,并且盖有经销商印鉴始为有效。
此保固書必須填妥各項內容,並且蓋有經銷商印鑑始為有效。

www.hundure.com

4

Wiring Connections /接线/ 接線

Pin	Color	PXR-50 ET(K) / EW(K)		Color	PXR-52 ET(K)/EW(K)/MT(K)/MW(K) ETW(K)/MTW(K)	
		Clock & Data	Wiegand		Clock & Data	Wiegand
1	Red/红/紅	DC +12V IN		Red/红/紅	DC +12V IN	
2	Black/黑/黑	Ground		Black/黑/黑	Ground	
3	Yellow/黄/黃	Data	W 0	Yellow/黄/黃	Data	W 0
4	Blue/蓝/藍	Clock	W 1	Blue/蓝/藍	Clock	W 1
5	Gray/灰/灰	Card Present	---	Gray/灰/灰	Card Present	---
6	Green/绿/綠	Case Sensor GND (To controller GND)		Pink/粉红/粉紅	Ground	
7	White/白/白	Case Sensor (To controller case sensor)		Orange & White 橙白/橙白	Ground	
8	Purple/紫/紫	Beep Control		Orange/橙/橙	Red LED Control : (5V)	
9	Brown/棕/棕	Green LED Control		Brown/棕/棕	Green LED Control : (5V)	
10	Orange/橙/橙	Orange LED Control		Purple/紫/紫	* Beep Control (LED & Beep Control level is based on this PIN for automatic detection.) (LED & Beep Control 准位以此PIN为自动侦 测依据) (LED & Beep Control 準位以此PIN為自動偵 測依據)	
11				White/白/白	Case Sensor GND (To controller GND)	
12				Green/绿/綠	Case Sensor (To controller case sensor)	
13				Red&White 红白/紅白	---	
14				Gray & White 灰白/灰白	---	

- *It is recommended that after the controller is powered on, the reader is powered on to facilitate signal level detection.
- *The reader automatically detects the voltage level within three seconds after the reader starts beeping.
- *If the line is abnormal, the machine stops after beeping for 5 seconds, please check and repair the line.
- *建议主机送電後，读卡机再送电以利讯号准位侦测。
- *读卡机开机哔声後三秒内，自动侦测电压准位。
- *若线路异常，机器长哔5秒之後停止，请做线路查修。
- *建議主機送電後，讀卡機再送電以利訊號準位偵測。
- *讀卡機開機嗶聲後三秒內，自動偵測電壓準位。
- *若線路異常，機器長嗶5秒之後停止，請做線路查修。

- Communication Interface Setting/读卡机介面设定 /讀卡機介面設定
Multi-communication interfaces model used only / (仅适用TW双介面机型) / (僅適用TW雙介面機型)

ON=1, OFF=0

ON

123456

Interface/介面/介面	EM	Mifare
S/N 序号 序號	T2	000100
	T1	000010
	W26	000110
	W34	000001
Block	-	000000

SW1

- To set block of mifare card, please select special software and equipment.
- 设定block需搭配选购专用软件及设备。
- 設定block需搭配選購專用軟體及設備。

- Note:
- For optimum read range, kindly use DC Linear power adaptor for the reader's power supply.
 - In order to ensure the reader's normal operation, input voltage should be between 12V ± 10%.
 - Kindly use minimum 22AWG double-shielded aluminum mylar foil twisted pair cable for the connection between the reader and the controller.
 - The distance between the reader and the control panel should not exceed 30 meters.
 - If the reader is installed in an open area or highly humid environment, it is recommended to protect the reader with an external shielding cover.
 - In order to reduce long distance hoise,The isolated net of transmission cable should connect to both ends of device ground.

- 注意：
- 供应读卡机之电源，建议使用非交换式的线性直流电源，以确保得到最佳的感应距离。
 - 为确保读卡机的正常运作，输入电源请确保在12V ± 10%之间。
 - 读卡机与控制器之间请使用 22AWG 以上的双隔离网铝箔麦拉对绞传输线。
 - 读卡机与控制器的距离建议不要超过 30米。
 - 如安装在露天或高湿度易渗水的环境，建议另行加装防水罩。
 - 为了减低远距离杂讯,传输线的隔离网地应接两端装置的地。



- 注意：
- 供應讀卡機之電源，建議使用非交換式的線性直流電源，以確保得到最佳的感應距離。
 - 為確保讀卡機的正常運作，輸入電源請確保在12V ± 10%之間。
 - 讀卡機與控制器之間請使用 22AWG 以上的雙隔離網鋁箔麥拉對絞傳輸線。
 - 讀卡機與控制器的距離建議不要超過 30 米。
 - 如安裝在露天或高濕度易滲水的環境，建議另行加裝防水罩。
 - 為了減低遠距離雜訊,傳輸線的隔離網地應接兩端裝置的地。

5

Testing /测试/ 測試

- The color of each reader's indicator vary according to their model.
- 读卡机灯号颜色依不同型号而有不同，实际颜色以出货为准。
- 讀卡機燈號顏色依不同型號而有不同，實際顏色以出貨為準。

- PXR-50

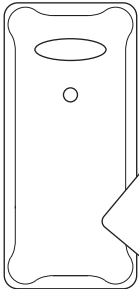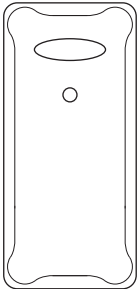

- PXR-52

