

1 Package Contents / 包装内容/ 包裝内容

Kindly ensure the product's contents upon unpacking; please refer to this quick start guide regarding the product 's specifications and important notices.

打开包装确认产品包装内容, 并请详细阅读此手册, 认识产品规格特性与注意事项。

打開包裝確認產品包裝內容, 並請詳細閱讀此手冊, 認識產品規格特性與注意事項。



Reader x 1
读卡机
讀卡機



Quick Start Guide x 1
快速安装手册
快速安裝手冊

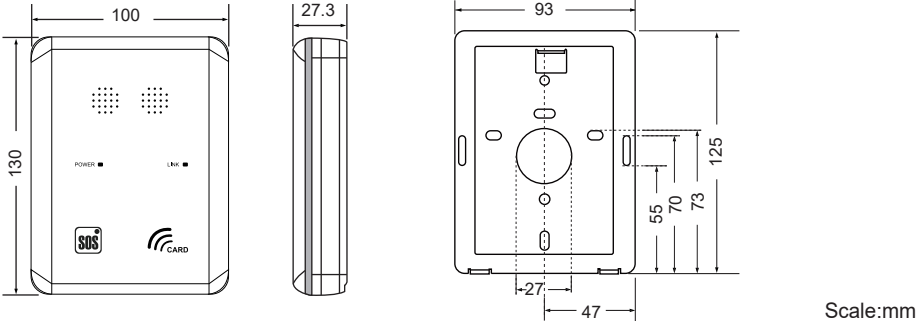


Plate x 1
固定板
固定板




Hex Key wrench x 1 Screw x 4 Cable x 1
六角扳手/螺丝/传输线
六角扳手/螺絲/傳輸線

2 Physical Dimension / 外观尺寸/ 外觀尺寸




3 Installation / 安装/ 安裝

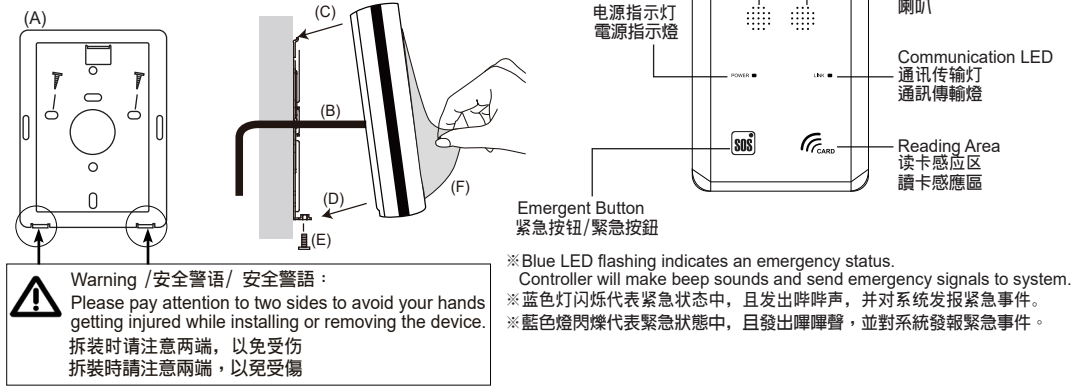

- Kindly refer to the “4 wiring connections” for the NODE ID settings before the hardware installation.
- Do not over tighten the back plate screws during installation to prevent distortion.
- (A). Mount the back plate onto the wall or other desired location.
- (B). Connect the wires in accordance with the wiring instruction below.
- (C). Make sure the back plate and the reader upper cover guides are aligned.
- (D). Install the reader upper cover to the back plate.
- (E). Use the hex key wrench to fasten the screws onto the bottom of the reader.
- (F). Tear off the protective film
- 安裝前請先參考 “4 接线” 设定读卡机NODE ID号。
- 安裝讀卡機固定板時, 請勿用力過大以避免造成彎曲變形。
- (A). 將安裝固定板固定在牆上或其他位置。
- (B). 依照接線說明將線接上, 並將各接線端子插上。
- (C). 讀卡機上方對準固定板卡榫。
- (D). 將讀卡機往固定板方向密合。
- (E). 使用六角扳手將螺絲由下方將底部密合鎖上。
- (F). 請撕掉保護膜。

4 Wiring Connections / 接线/ 接線

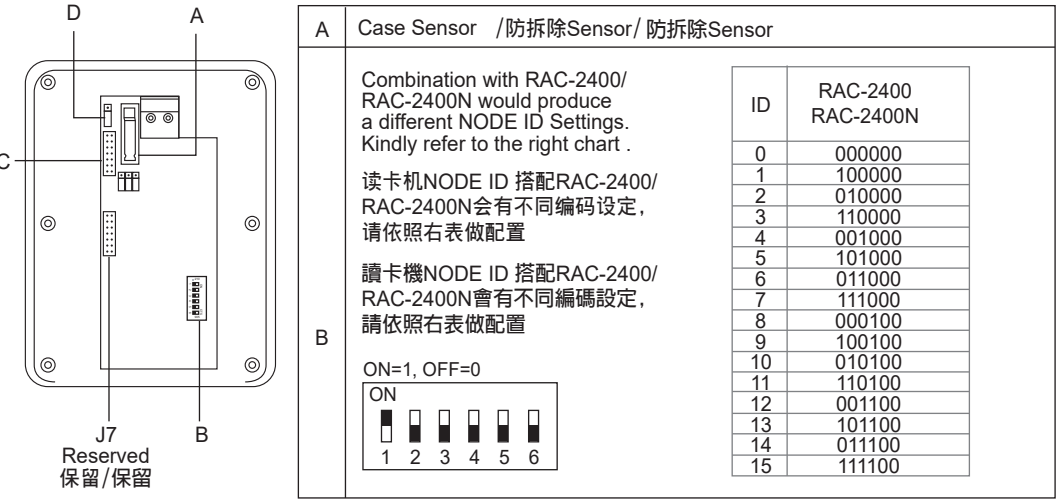

HUNDURE HUNDURE TECHNOLOGY CO., LTD.

RS-485 L-R SERIES READER


PXR-942 L-R SERIES

Quick Start Guide

快速安装手册


快速安裝手冊

Ver. 1.0

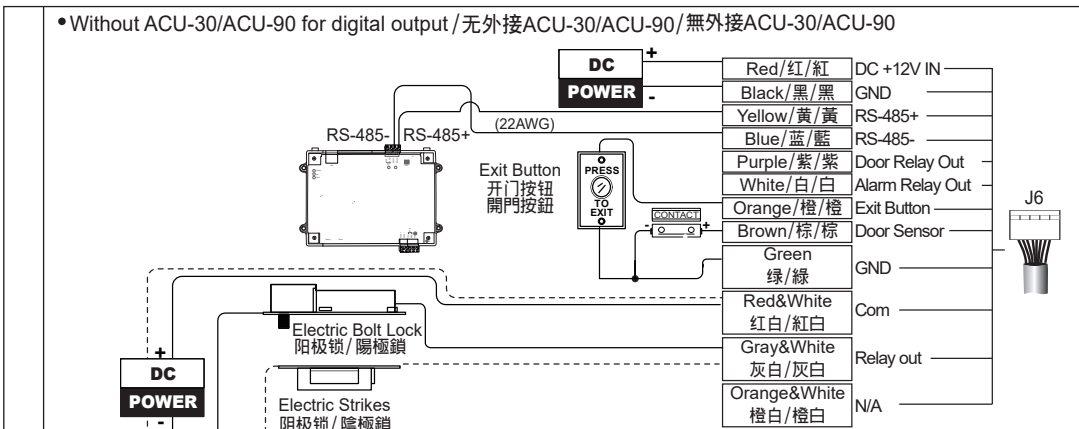

When lock controlled by built-in relay, kindly follow lock's character to adjust JP2. / 使用内建Relay控制电锁, 要依照电锁特性调整JP2. / 使用内建Relay控制電鎖, 要依照電鎖特性調整JP2.

• With ACU-30/ACU-90 for digital output / 外接ACU-30/ACU-90 / 外接ACU-30/ACU-90

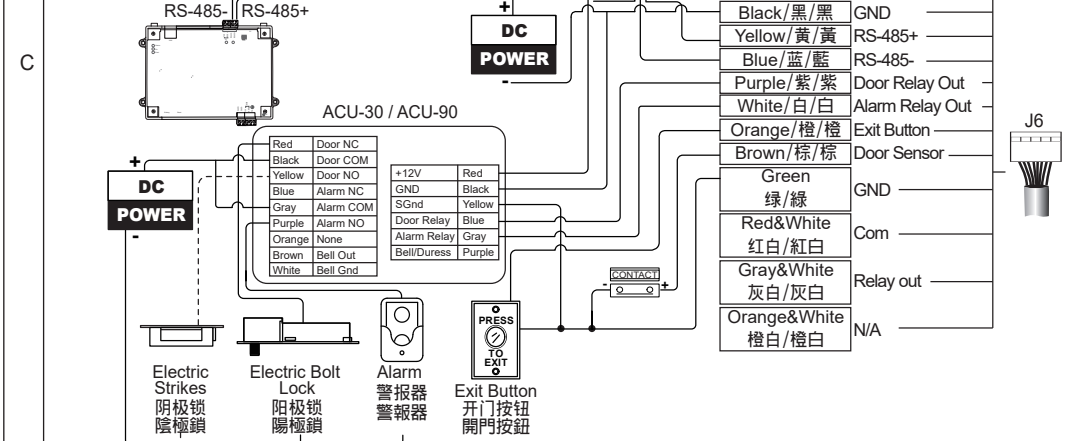

- When combined with NCU, kindly use ACU-90 for digital output. Other multi door control panels are using ACU-30.
- When Electric Bolt Lock is used, kindly connect the wire to COM and NC contacts.
- When Electric Strikes is used, kindly connect the wire to COM and NO contacts.
- Note: 1. The maximum voltage and contact rating of the relay is DC 12V/2A or DC 24V/1A. If you connect a terminal with alternating current, make sure to transfer a relay with higher power output.
- 2. To enhance security, kindly install the reader and the ACU-30/90 separately in different locations.
- 若做为NCU之读卡机时, 请搭配ACU-90使用, 其它主机则使用ACU-30。
- 使用断电开门电锁, 如阳极电锁, 请接COM点及NC点。使用通电开门电锁, 如阴极电锁, 请接COM点及NO点。
- 注意: 1. RELAY最大承载电力请勿超过 DC 12V/2A或DC 24V/1A, 如控制点设备为交流电源, 请另行转换大功率电驿(继电器)。
- 2. 为提高门禁的安全性, 安装读卡机时须与ACU-30/90分开安装在不同的位置。
- 若做为NCU之读卡机时, 请搭配ACU-90使用, 其它主机则使用ACU-30。
- 使用斷電開門電鎖, 如陽極電鎖, 請接COM點及NC點。使用通電開門電鎖, 如陰極電鎖, 請接COM點及NO點。
- 注意: 1. RELAY最大承載電力請勿超過 DC 12V/2A或DC 24V/1A, 如控制點設備為交流電源, 請另行轉換大功率電驛(繼電器)。
- 2. 為提高門禁的安全性, 安裝讀卡機時須與ACU-30/90分開安裝在不同的位置。

JP2
Built-In relay
内建Relay

NO

NC

When Electric Bolt Lock is used, kindly connect the wire to COM and NC contacts. When Electric Strikes is used, kindly connect the wire to COM and NO contacts.

NO模式-RELAY常态开路模式, 如果被控制点为通电运行的装置, 请选择此一模式。

NC模式-RELAY常态导通模式, 如果被控制点为断电运行的装置, 请选择此一模式。

NO模式-RELAY常態開路模式, 如果被控制點為通電運行的裝置, 請選擇此一模式。

NC模式-RELAY常態導通模式, 如果被控制點為斷電運行的裝置, 請選擇此一模式。

Important Notice:

*Please provide a separate power supply for each reader. A long transmission distance could cause power degradation.

*If the reader is installed upon metallic object, add proper thickly plastic separator on back of reader for isolation and avoid interference.

*The distance between two readers should be over 30cm to prevent radio frequency interference from each other.

注意事項

*读卡机请使用独立电源, 避免因传输距离的电流衰减而影响读卡机正常运行。

*读卡机感应距离容易受到金属等物质的影响, 安装位置如为金属材质, 建议在读卡机背部加装适当厚度的隔离垫片。

*2个读卡机如果距离太近将会互相干扰而影响感应距离甚至无法感应, 建议2个读卡机之间的距离最少30公分以上。


注意事項

*讀卡機請使用獨立電源, 避免因傳輸距離的電流衰減而影響讀卡機正常運作。

*讀卡機感應距離容易受到金屬等物質的影響, 安裝位置如為金屬材質, 建議在讀卡機背部加裝適當厚度的隔離墊片。

*2個讀卡機如果距離太近將會互相干擾而影響感應距離甚至無法感應, 建議2個讀卡機之間的距離最少30公分以上。

5 Testing / 测试/ 測試

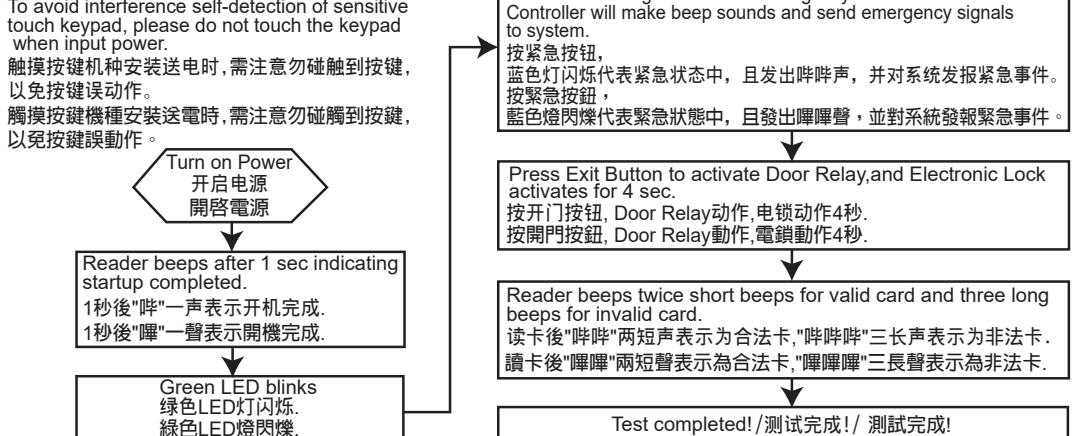

One Year Limited Warranty / 产品保固证明书 / 產品保固證明書

We warrants this product against defect in material or workmanship for 1 year from the date of purchase. If such a defect is discovered within this warranty limitation, contact your direct vendor for repair or replacement of your unit.

When returning the product, you must ship the product in its original packaging or packaging that gives an equal degree of protection. This warranty becomes invalid if the factory-supplied serial number has been removed or altered on the product.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than We.

In no event shall We liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential, damages resulting from the use of the product the product, its accompanying software, or its documentation. We makes no warranty or representation expressed, implied, or statutory, with respect to its products, contents of use of this documentation and all accompanying software, and specially disclaims its quality, performance, merchantability or fitness for any particular purpose. We reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity.

我們保固此產品於購買日起一年之內因為材料上或是生產製造中所產生的缺陷, 所造成的外觀上, 或是功能上的缺陷及故障問題。若您是在此保固期限之內發現此類問題, 請聯絡本公司的服務人員, 退回此產品, 我們將替您免費維修或是更換產品。

當您退回此產品時, 請依照原始的包裝方式包裝此產品, 或是給予同等級的包裝保護; 若是我們收到此產品時, 產品上沒有出廠時的序號標籤, 或是產品已經拆開或與出廠時有任何不同, 這個保固將變得無效。

此保固不包含天然的, 以及人為的破壞或改變, 或是意外事故、不正常操作、誤用、濫用等外在因素所造成的損壞。

此保固不包含不當的操作或保養, 不當的連結至其他設備, 或是由本公司以外的人員企圖修復此產品。

起因於使用這種產品, 在間接、特別、次要因素, 或者隨之發生, 造成伴隨著軟件或其它文檔的損害, 本公司的責任在任何情況下都不得超過這產品的售價。

關於產品的軟件和文檔編制的全部内容, 本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。

本公司保留權利修正或者不斷改進它的產品, 軟件或者文檔編制無義務通知任何個人或者購買者。

我們保固此產品於購買日起一年之內因為材料上或是生產製造中所產生的缺陷, 所造成的外觀上, 或是功能上的缺陷及故障問題。若您是在此保固期限之內發現此類問題, 請聯絡本公司的服務人員, 退回此產品, 我們將替您免費維修或是更換產品。

當您退回此產品時, 請依照原始的包裝方式包裝此產品, 或是給予同等級的包裝保護; 若是我們收到此產品時, 產品上沒有出廠時的序號標籤, 或是產品已經拆開或與出廠時有任何不同, 這個保固將變得無效。

此保固不包含不當的操作或保養, 不當的連結至其他設備, 或是由本公司以外的人員企圖修復此產品。

起因於使用這種產品, 在間接、特別、次要因素, 或者隨之發生, 造成伴隨著軟件或其它文檔的損害, 本公司的責任在任何情況下都不得超過這產品的售價。

關於產品的軟件和文檔編制的全部内容, 本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。

本公司保留權利修正或者不斷改進它的產品, 軟件或者文檔編制無義務通知任何個人或者購買者。

Model / 型号 / 型號	Serial no. / 序号 / 序號	Date of Purchase / 购买日期 / 購買日期	Reseller stamp / 经销商 / 經銷商

Warranty will be valid only after filling out this form and stamped or signed by reseller!

此保固书必须填写妥各项内容, 并且盖有经销商印章始为有效。

此保固書必須填寫妥各項內容, 並且蓋有經銷商印章始為有效。

www.hundure.com